

XL LOCK MAINTAINANCE AND REPAIR

Cleaning

Clean the face of the lock with a damp cloth only.

Lubrication

The hooks and bolts should be lubricated every six months using a light machine oil in the positions indicated.
In coastal areas lubrication should be carried out more frequently.

Maintenance

Apart from lubrication the lock will need little maintainance.
If it should become difficult to lift the handle and engage the hooks the lock and keep alignment should be checked and any necessary adjustments made.

Cylinder removal

In order to change the cylinder insert the key and remove the screw marked 'B' rotate the key whilst gently pulling the cylinder from the lock.

Lock removal

If it should become necessary to remove the lock first remove the cylinder and handles and then remove the screws marked 'A' opposite the lock can then be eased from the door.

