



Door Stay

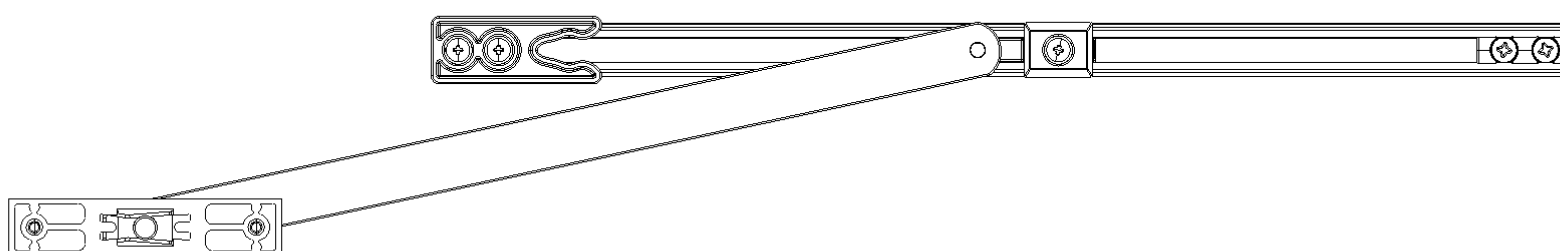

Position the UAP Door Stay onto the head of the door sash 105mm from the sash rebate corner on the hinge side.

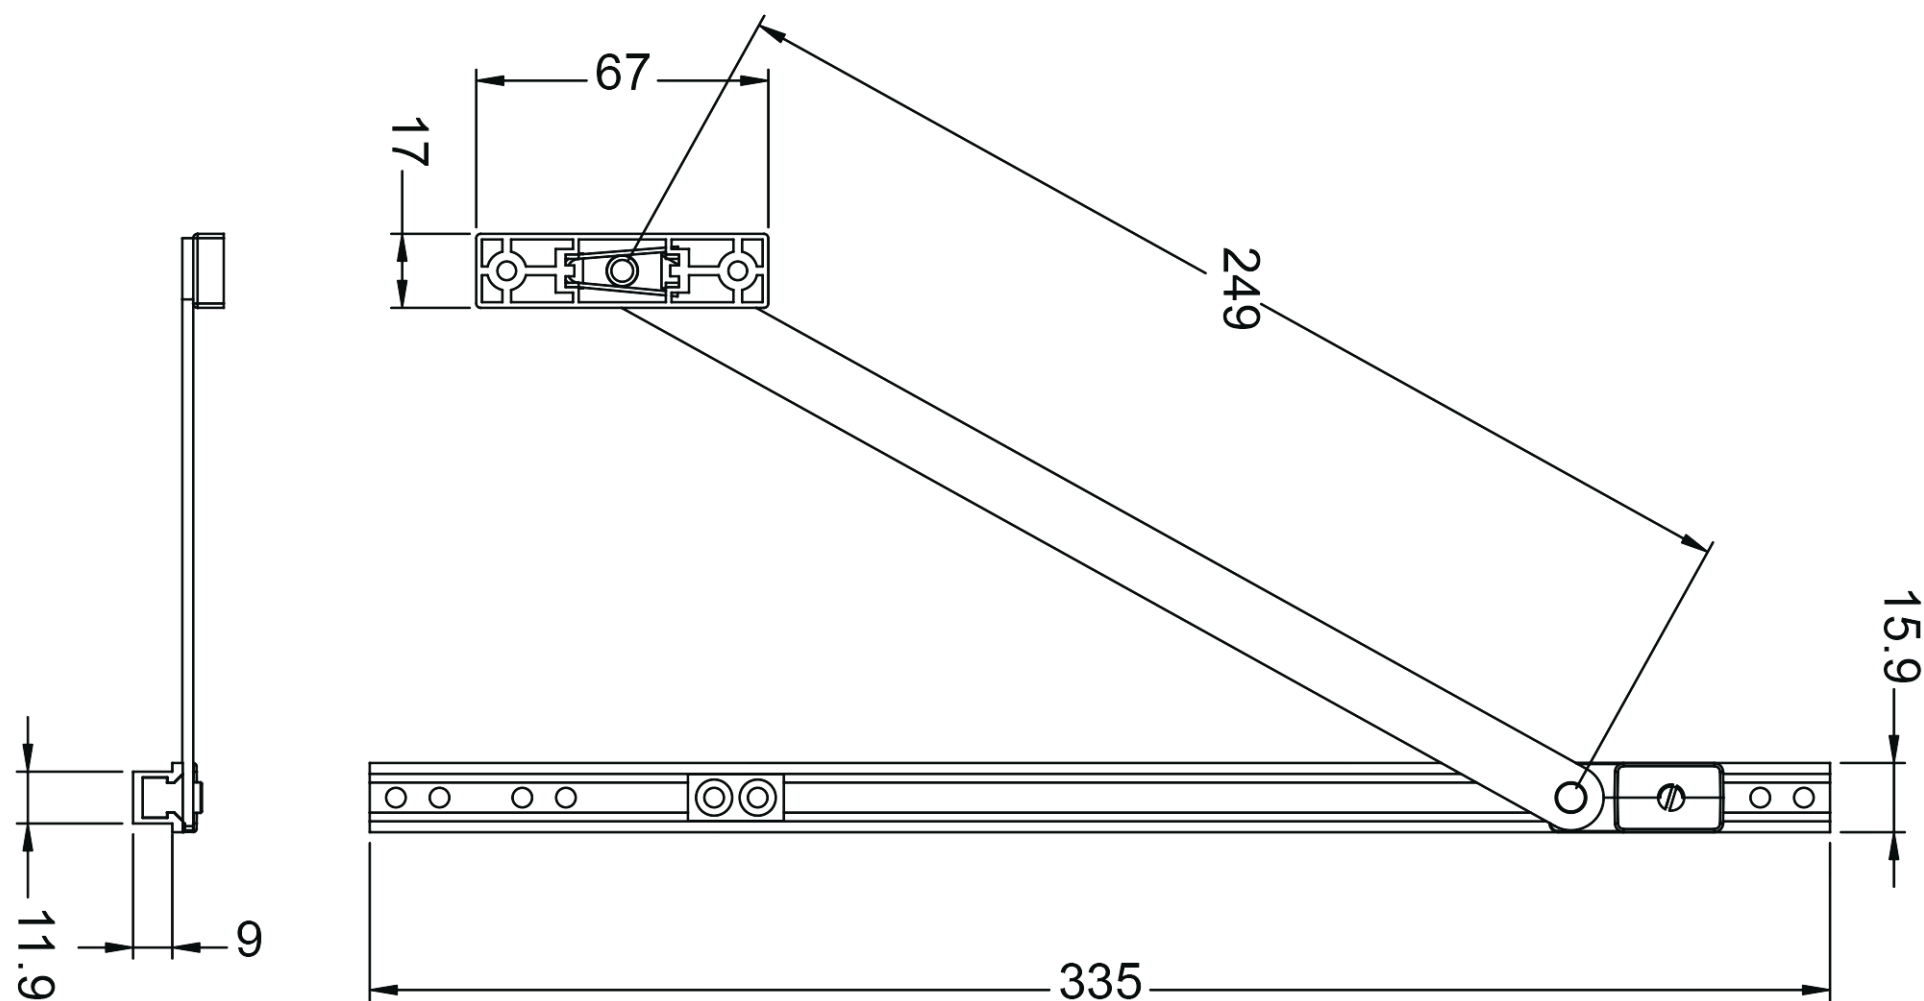

Position the striker plate behind the bead groove on the outer frame 45mm from the corner and screw into position.



After hanging the sash, clip the arm of the UAP Door Stay into the striker plate.

Note: Should additional friction be required simply tighten the hexagonal screw within the UAP Door Stay

Door Stay

INNOVATIVE DOOR HARDWARE SOLUTIONS
SUITABLE FOR ALL MAJOR UPVC PROFILES



Features Include:

- Suitable for ALL major uPVC profiles
- Easy to fit eurogroove & bracket to frame
- Restrictor limits door opening to a preset position or to a maximum of 90 degrees
- Modern, Innovative Design
- Slider contains friction screws to hold the door open in mild wind conditions
- Can withstand thousands of openings without becoming damaged

