

THE SOTERIAN

FITTING INSTRUCTIONS


UAP: The Soterian
KM670828
TS008:2022 CLASSIFICATION



A 1 2 N 3 N 0 0

Part Number TS 008 EXTERNAL and INTERNAL. The Soterian.
Fitting Instructions for TS008: 2022 letterplate.
Door thickness: 44mm - 70mm. For composite, timber and PVC doors.

Note: An alternative extension and fixings will need to be requested for door thicknesses beyond 44mm.

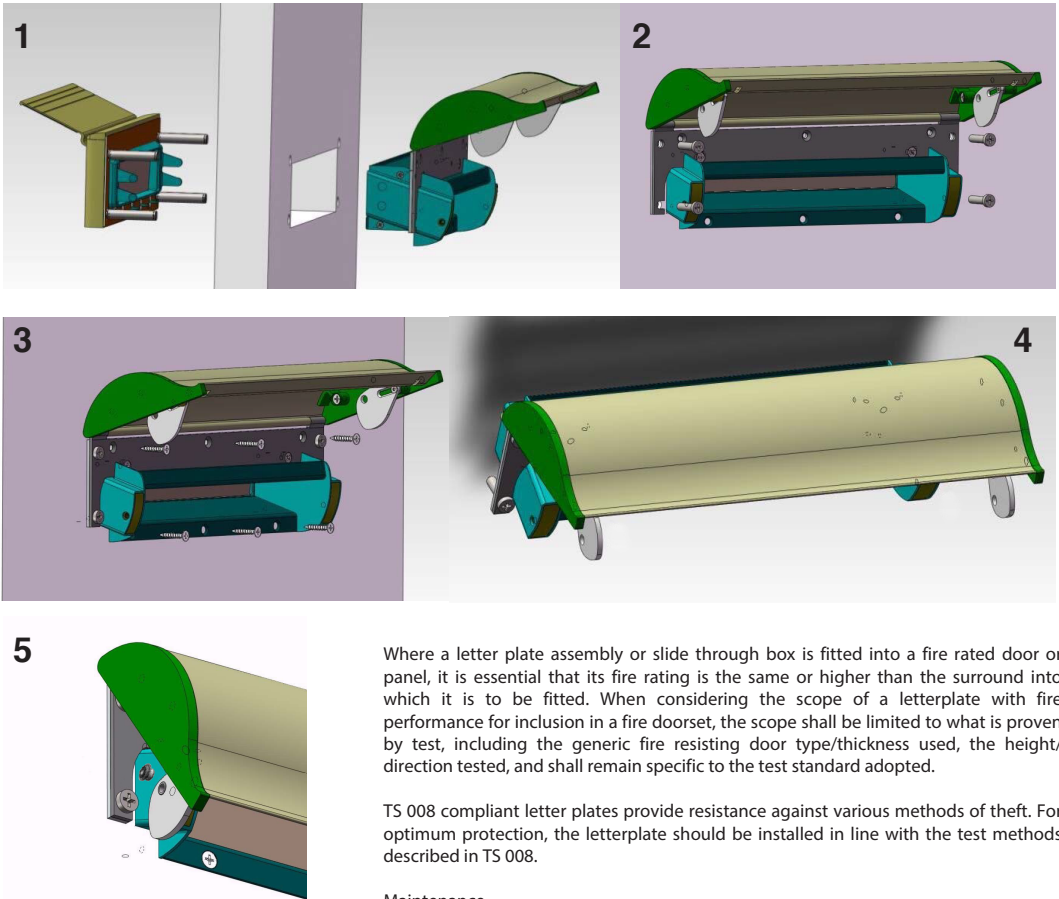

- How to use hollow wall fixing for UPVC
1. Mark your point with a pencil.
 2. Make pilot holes in the 6 fixing points.
 3. DO NOT make the hole wider than the anchor.
 4. Place the anchor over the hole and firmly tap it in until it's flush with the surface

Where a letter plate assembly or slide through box is fitted into a fire rated door or panel, it is essential that its fire rating is the same or higher than the surround into which it is to be fitted. When considering the scope of a letterplate with fire performance for inclusion in a fire doorset, the scope shall be limited to what is proven by test, including the generic fire resisting door type/thickness used, the height/direction tested, and shall remain specific to the test standard adopted.

TS 008 compliant letter plates provide resistance against various methods of theft. For optimum protection, the letterplate should be installed in line with the test methods described in TS 008.

Maintenance

To maintain this product's appearance, simply wipe over with a very mild soap solution and a soft cloth once a month or every two weeks in areas of high sea salt such as coastal areas and areas of high pollution.

DO NOT:

Wipe over with a strong cleaning detergent or any cloths which may scratch the surface of the product.