





## BACK TO BACK FIXING (2 HANDLES REQUIRED)

### COMPONENTS


Back to back offset handle

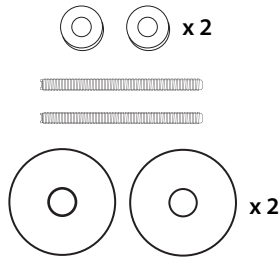


1

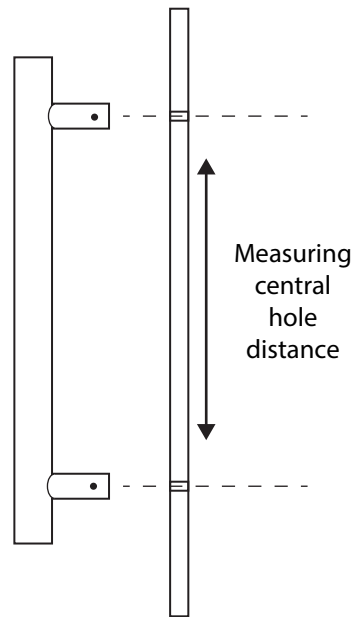


3

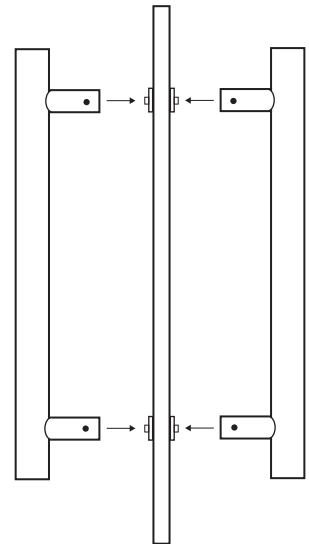

2

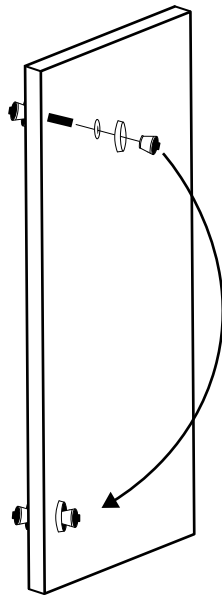

4

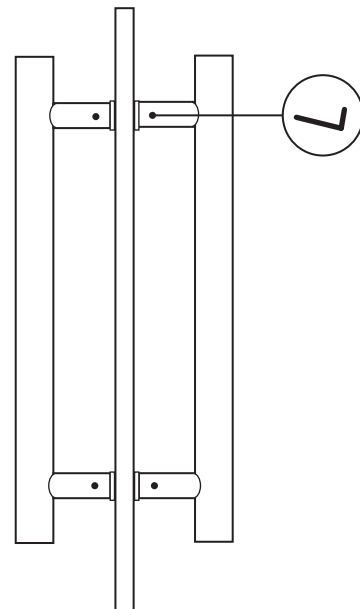

## INSTRUCTIONS

- 1) Measuring the suitable distance, the holes should be 1-2mm larger than the bolt diameter. Refer to page 1 for the hole centres.
- 2) Screw the 80mm bolts onto a set of brass reducers. The bolt is suitable for most popular door thicknesses but may need to be cut for glass. Feed the plastic washers over the bolt. (The plastic is strongly recommended for glass).
- 3) Feed the bolts into the holes in the door and screw the brass reducer on from the other side. Remember to include the plastic washer.
- 4) You can now fix both sides of the handle. Secure each leg firmly with both grub screws.